

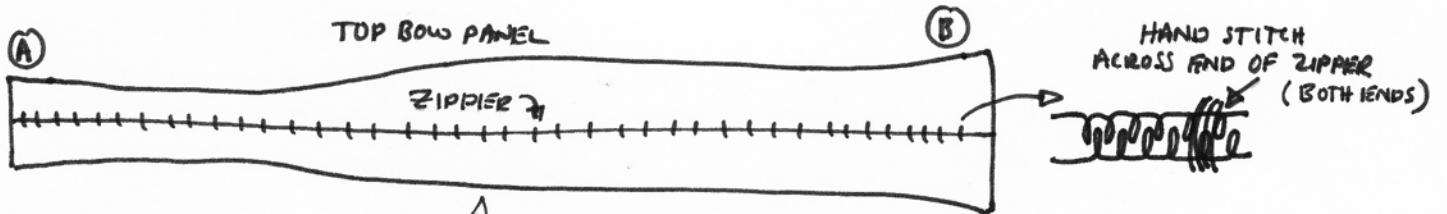
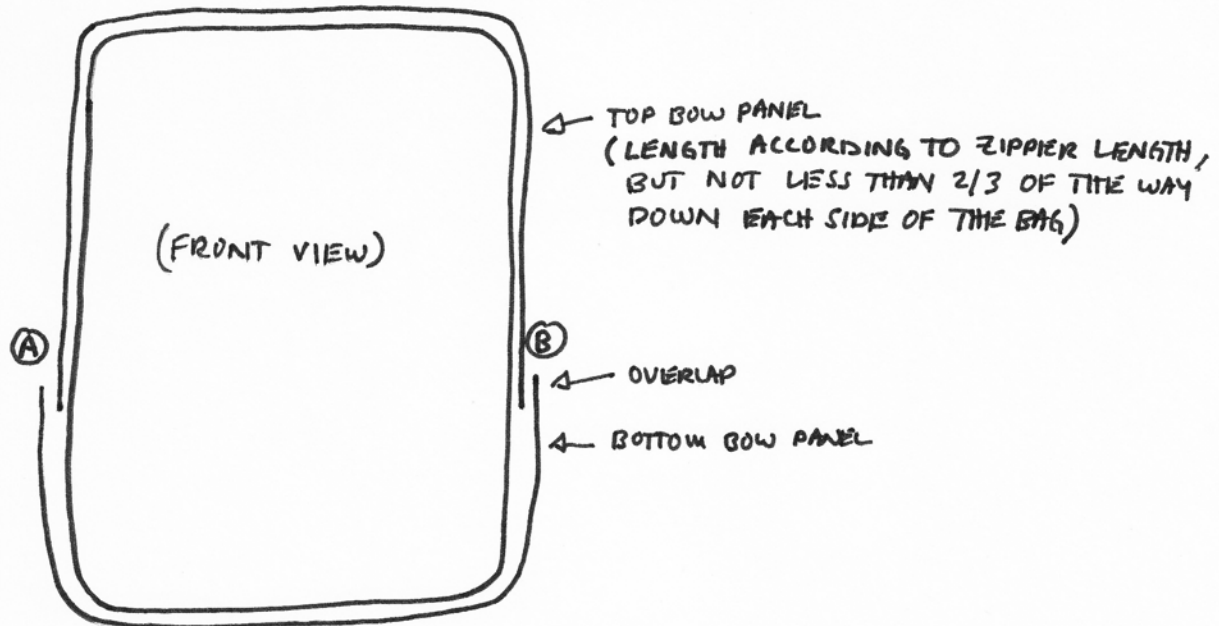



ZIPPER DETAIL

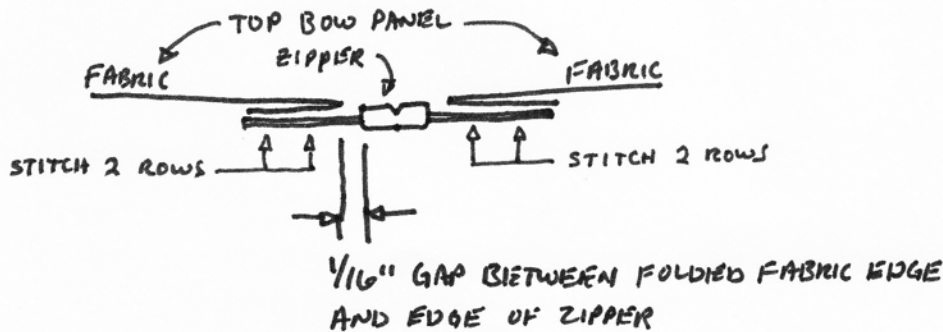



↑ CURVED PROFILE ACCORDING
TO THICKNESS OF HOORN

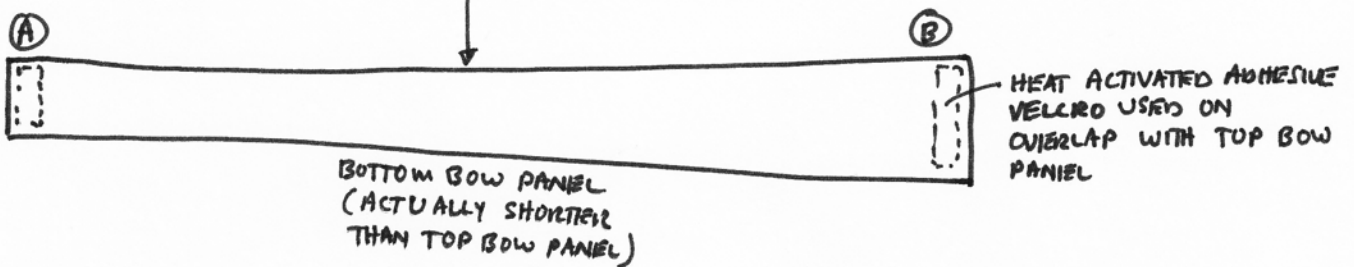


SHOULDER STRAP DETAILS

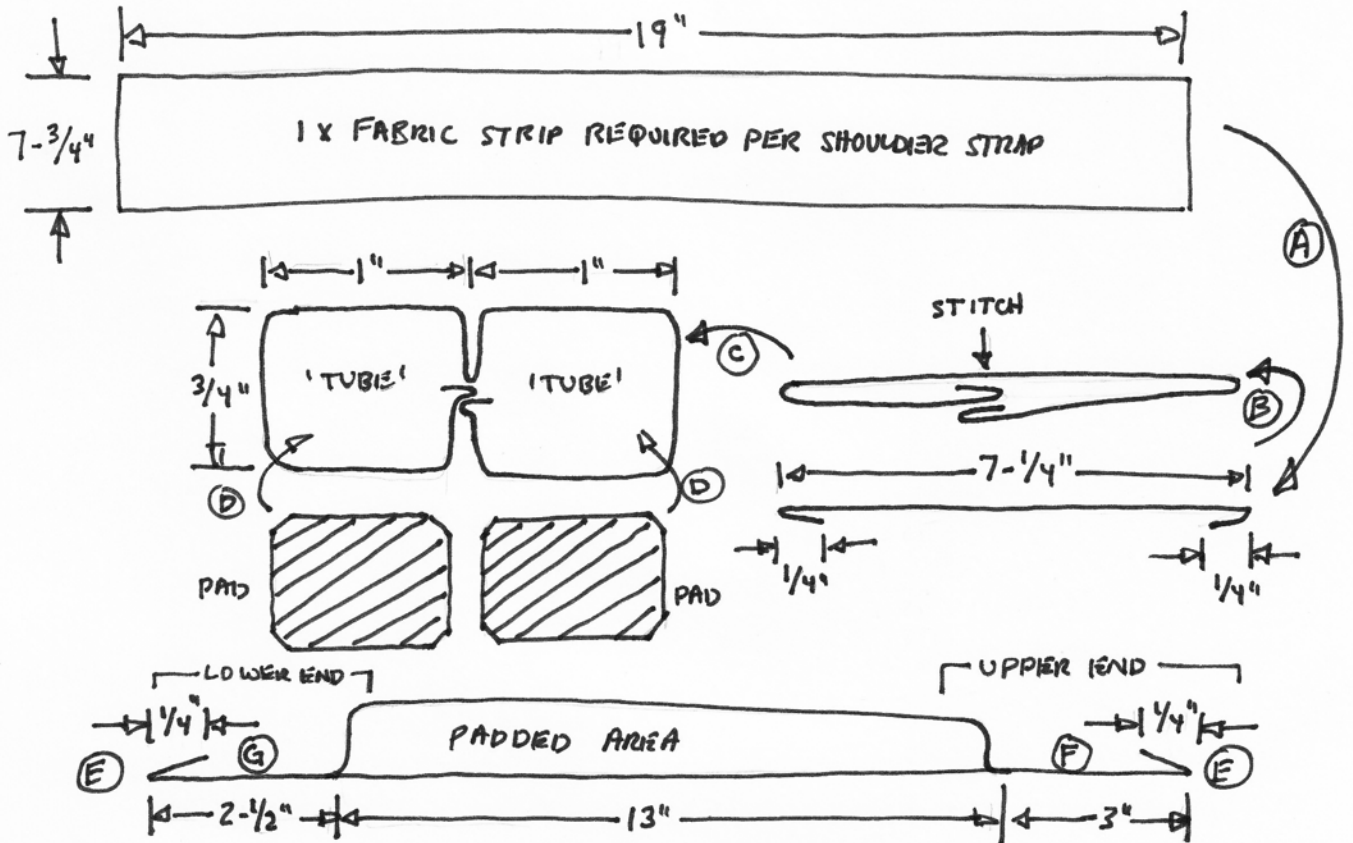



- (A) FOLD $\frac{1}{4}$ " OF BOTH LONG EDGES AND IRON
- (B) FOLD OVER SO THAT EDGES FOLDED IN (A) OVERLAY, AND STITCH LENGTHWISE AT CENTER OF EDGE FOLDS, MAKING SURE THAT STITCH LINE IS CENTERED HORIZONTALLY
- (C) EXPAND THE TWO 'TUBES'
- (D) INSERT 13" LONG $\frac{3}{4}$ " X 1" PADS INTO TUBES
- (E) FOLD OVER $\frac{1}{4}$ " ENDS AND IRON
- (F) CROSS STITCH UPPER END
- (G) LAY TWO LAYERS OF 1" WEB BELT ON LOWER END, FOLD FABRIC EDGES OVER, CROSS STITCH

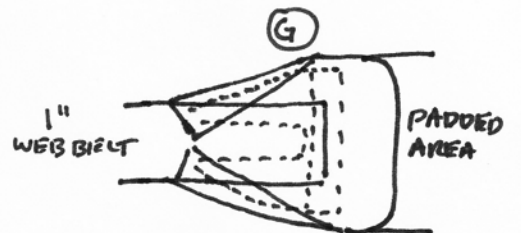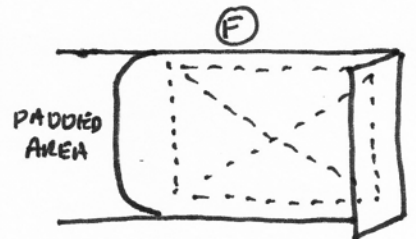



SHOULDER STRAP DETAILS

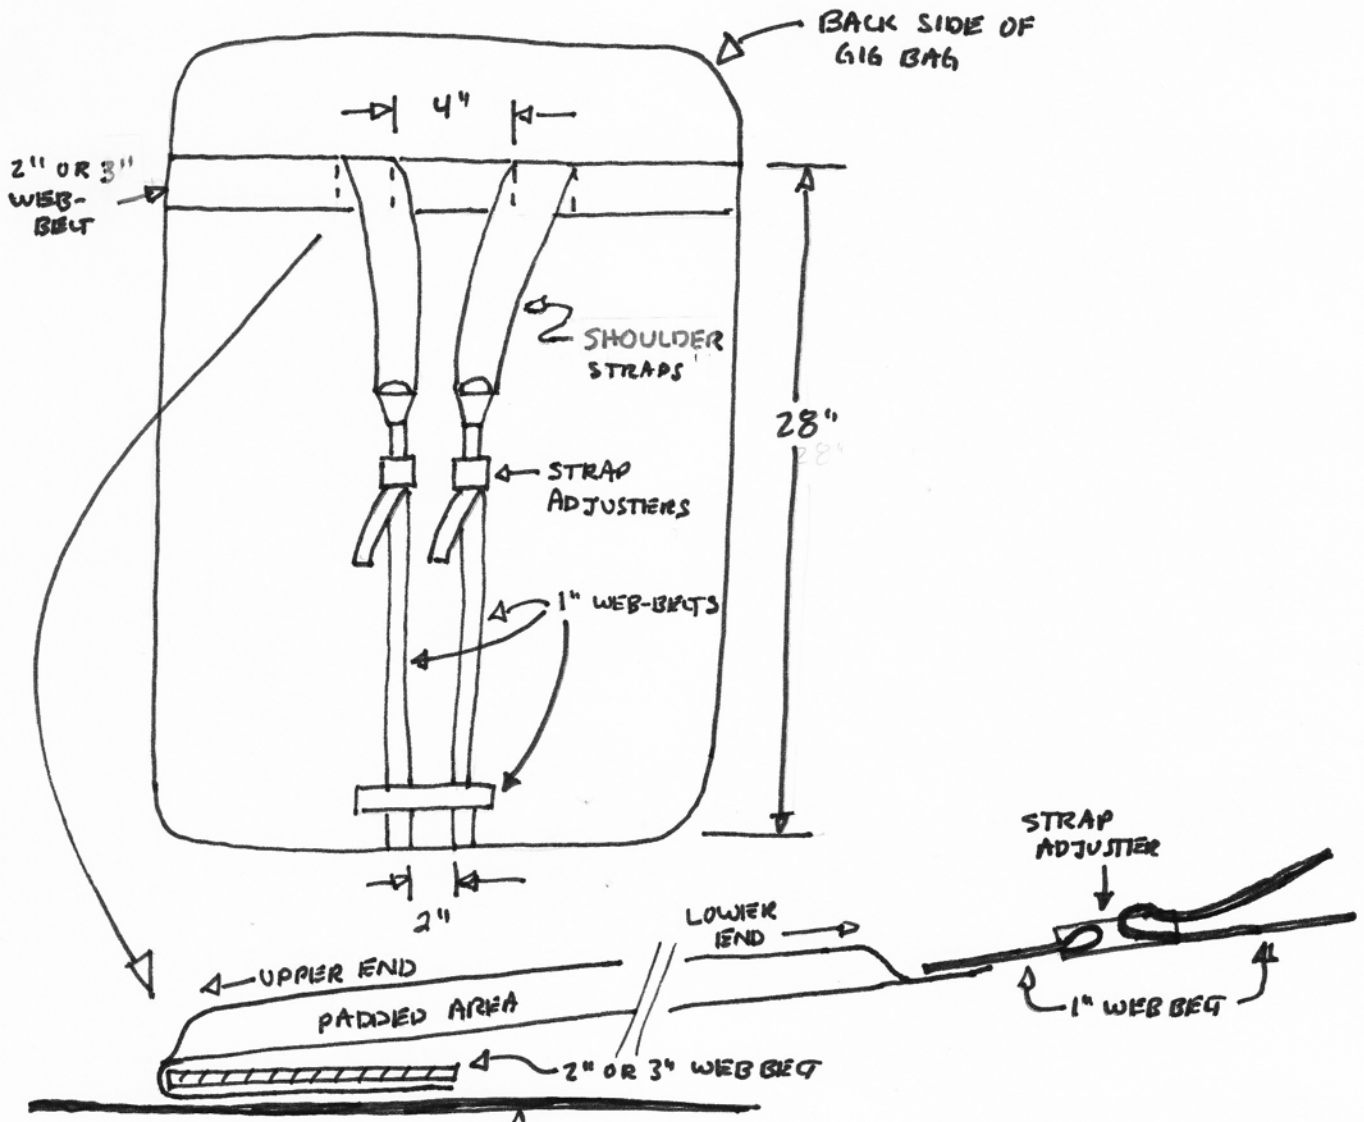


CROSS STITCH THIS AREA THROUGH WEB BELT, FLAT UPPER END OF SHOULDER STRAP, AND FABRIC OF BAG

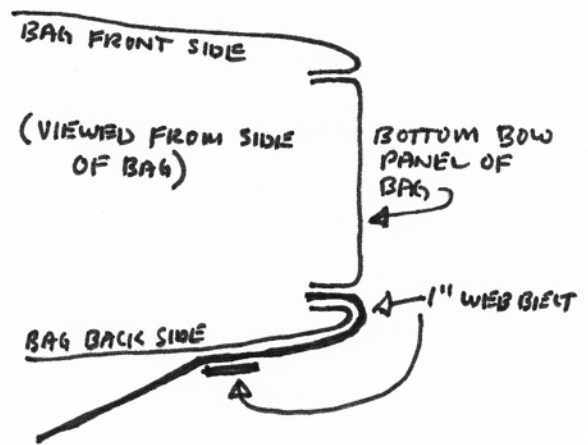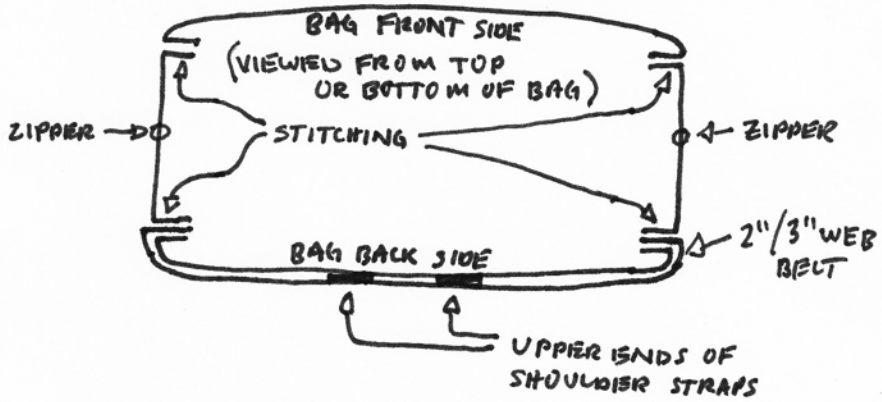



HANDLE DETAILS

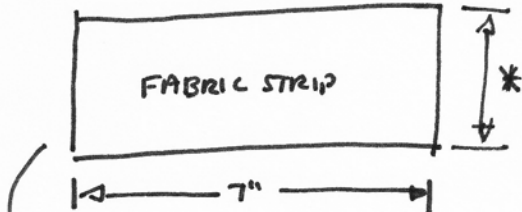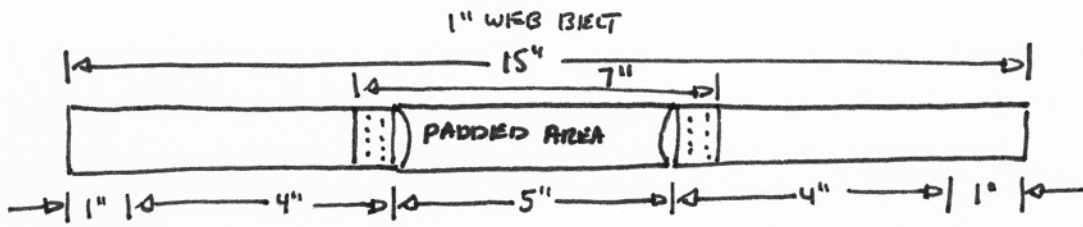

* FABRIC WIDTH DEPENDS ON THICKNESS OF AVAILABLE PADDING

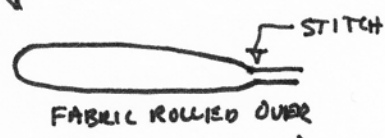

ROLL TUBE IN SIDE OUT

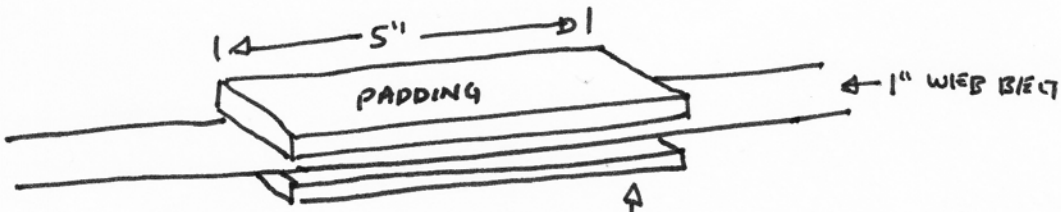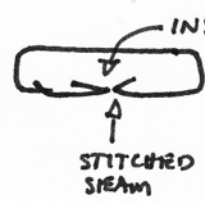

SECURE PADDING TO WEB BELT WITH ADHESIVE TAPE AT ENDS UNTIL INSERTED INTO FABRIC TUBE

